


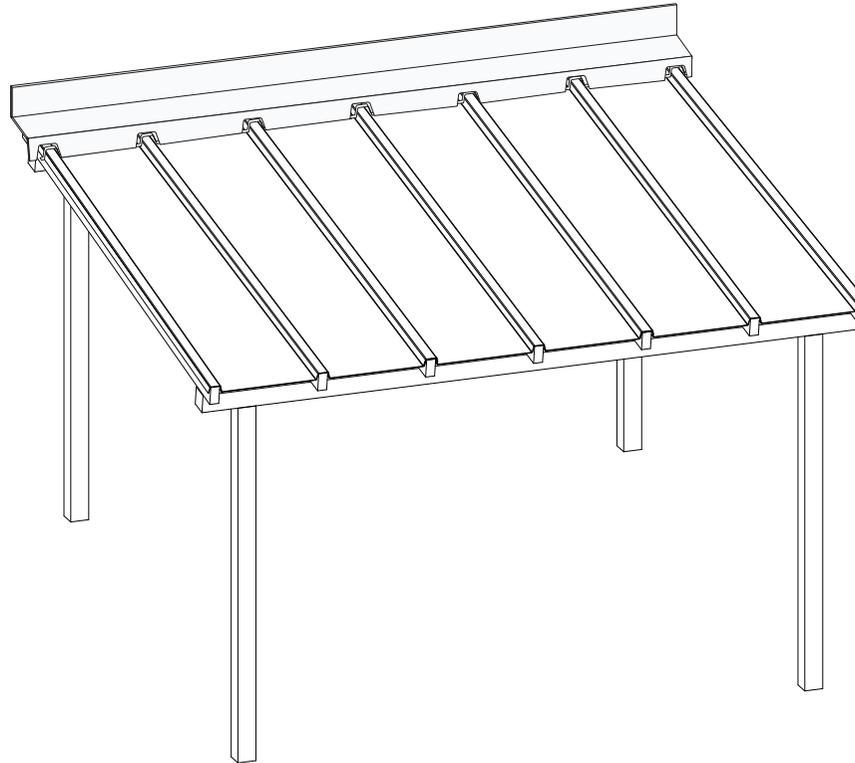

# EZ Glaze™ 60 | Installation Guide



EZ Glaze™ - Product Page



Installations video




PALRAM Webseite






# Installation

## Safety comes first

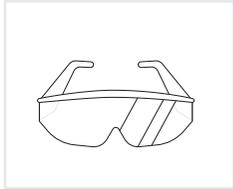

Do not step directly on the sheets between the purlins!

When installing EZ Glaze or doing maintenance work, always use stepping ladders or crawling boards, supported by minimum three roof structural elements.

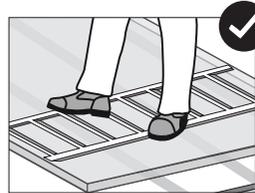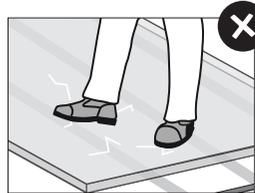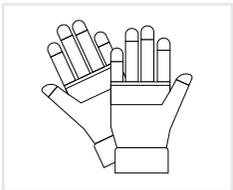


## Required Tools



or




## 1 Rafter spacing

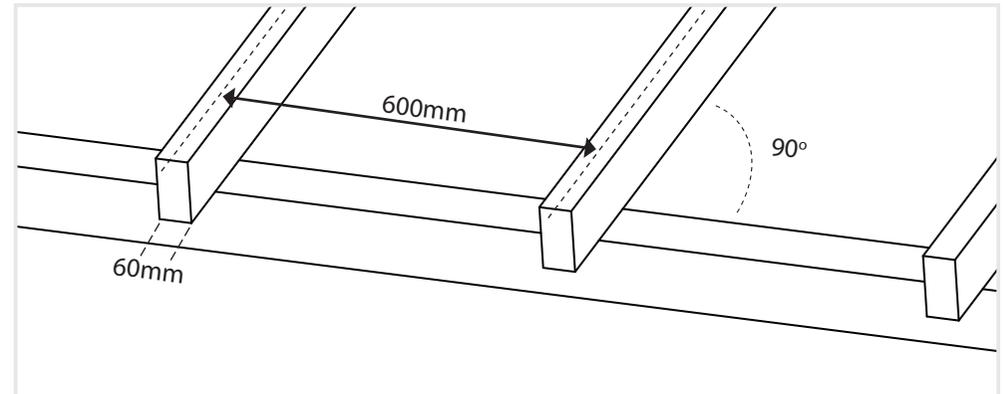

- EZ Glaze is designed for 60mm rafters.
- Distance between rafters must be 600 mm (center to center).
- Make sure the rafters are perfectly perpendicular to the beams/wall.
- EZ Glaze requires rafters support only, no purlins are required.


## 2 Minimum Roof Slope

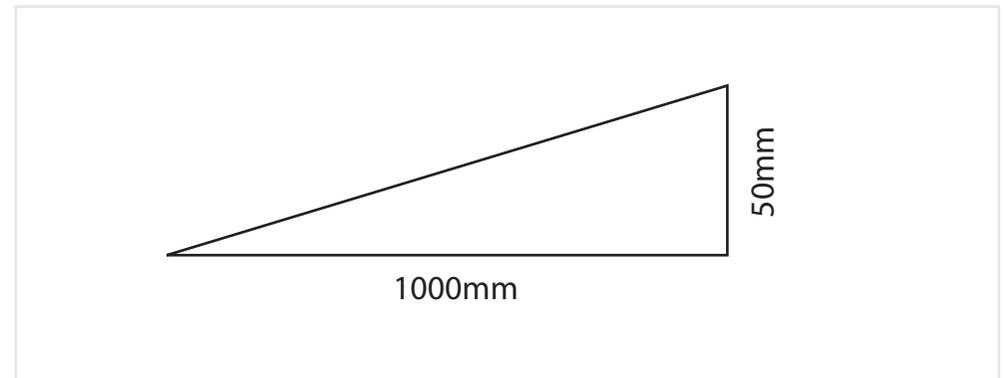

- To ensure proper water runoff, slope should be at least 5% (50mm rise over 1m length).


# Installation

## 3 Foamed tape application (optional).

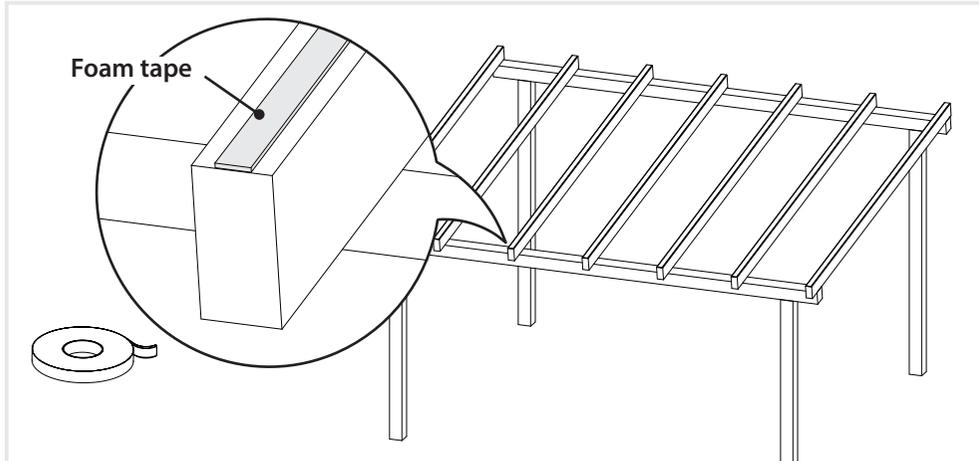


Applying foamed tape on each rafter will reduce friction due to thermal expansion.

## 4 Placing the 1st EZ Glaze panel

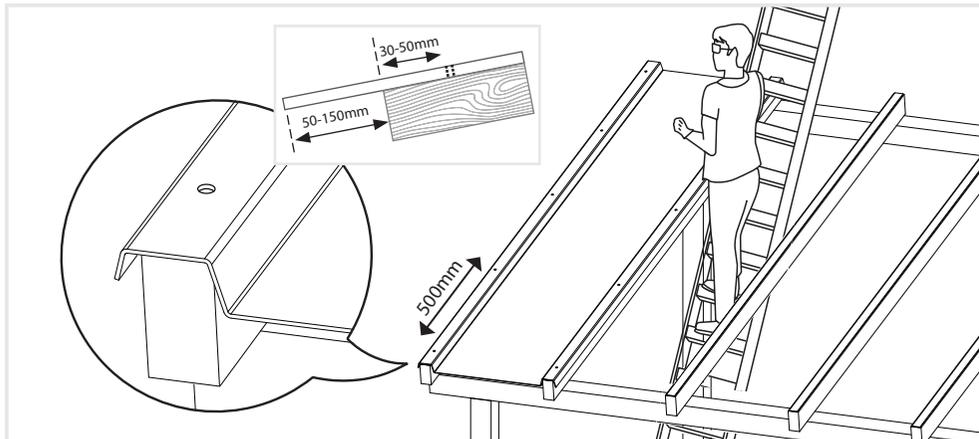

- Place the first EZ Glaze panel on the rafters, leaving 50-150mm overhang.
- Pre-drill 10 mm holes along the outer corrugation, every 500mm.
- 1st and last drills should be located 30mm-50mm from the rafter's top and bottom edges.


## 5 Fixing the 1st EZ Glaze panel

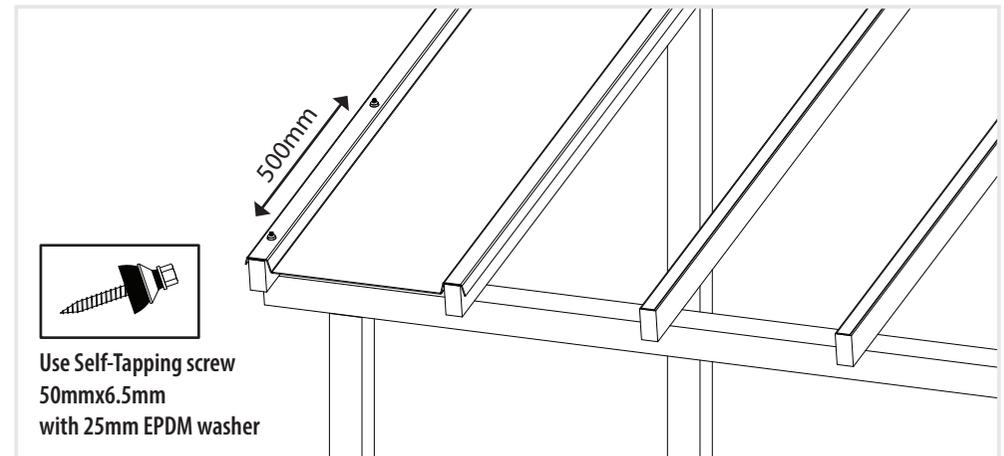

Use Self-Tapping screw  
50mmx6.5mm  
with 25mm EPDM washer

Fix the first EZ Glaze panel's outer corrugation, using specified screws and washers through the pre-drilled holes. Start at the bottom edge and work your way up.


## 6 Placing the 2nd EZ Glaze panel

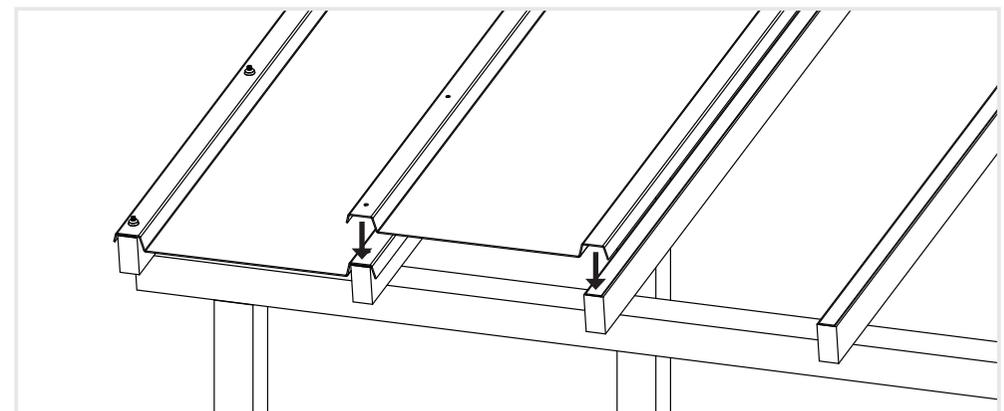

- Place the second panel, lateral overlapping the first one.
- Pre-Drill both panels together on the lateral overlap, every 500mm.


# Installation

## 7 Fixing the 2nd EZ Glaze panel

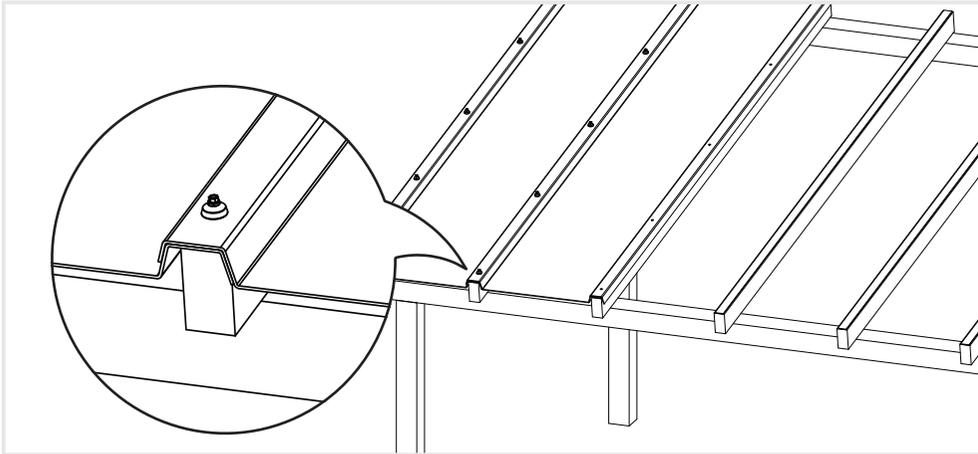



Fix both panels overlap, using specified screws and washers through the pre-drilled holes. Start at the bottom edge and work your way up.

## 8 Completing the installation

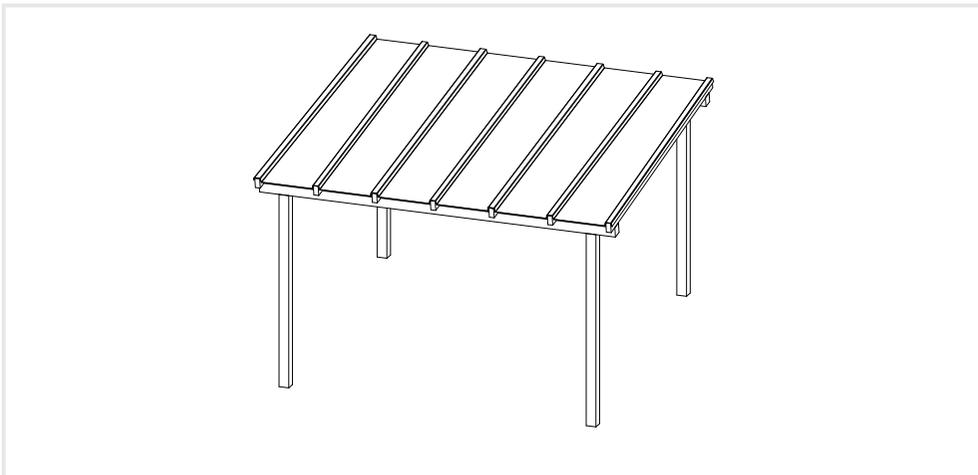


Repeat stage 6 & 7 with the remaining panels.

## \* Side Wall Flashing in case the panel is trimmed (Not supplied by Palram)

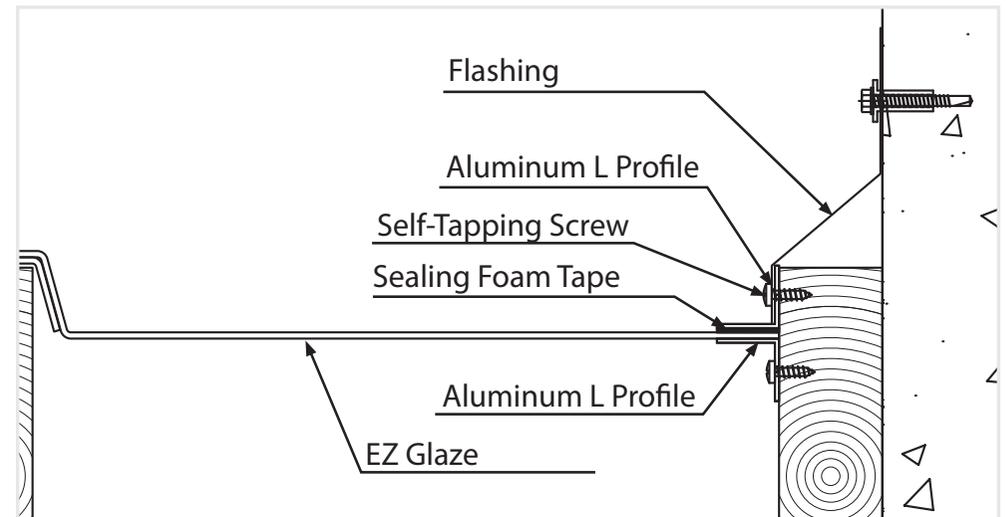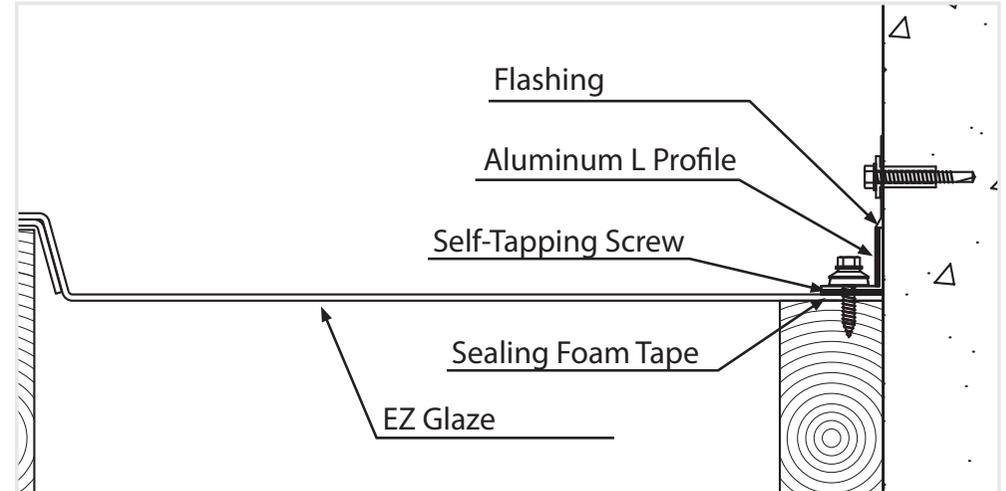


# Installation - Finishing


## 9 Butyl Tape (Not included in EZ Glaze Kit)

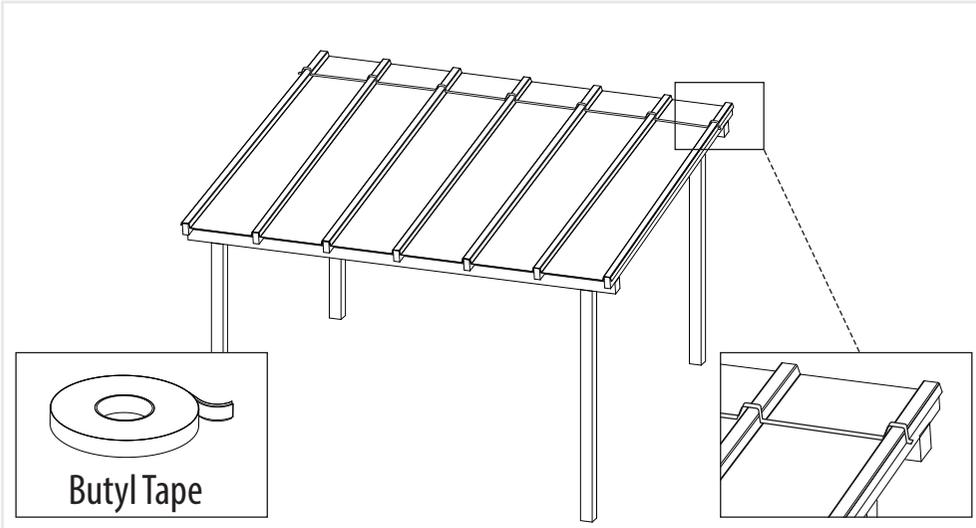

## 11 Silicone (Not included in EZ Glaze Kit)

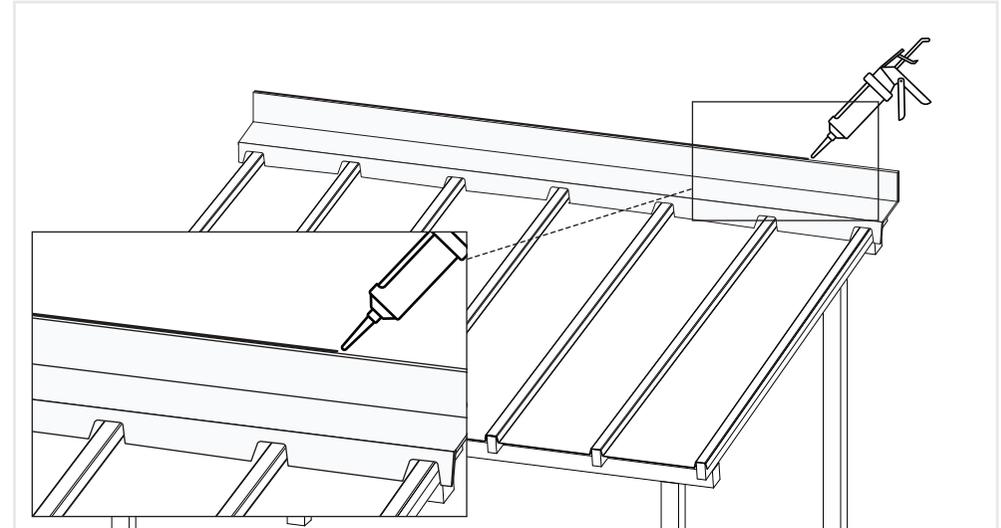

## 10 Installing Head Wall Flashing (Not included in EZ Glaze Kit)

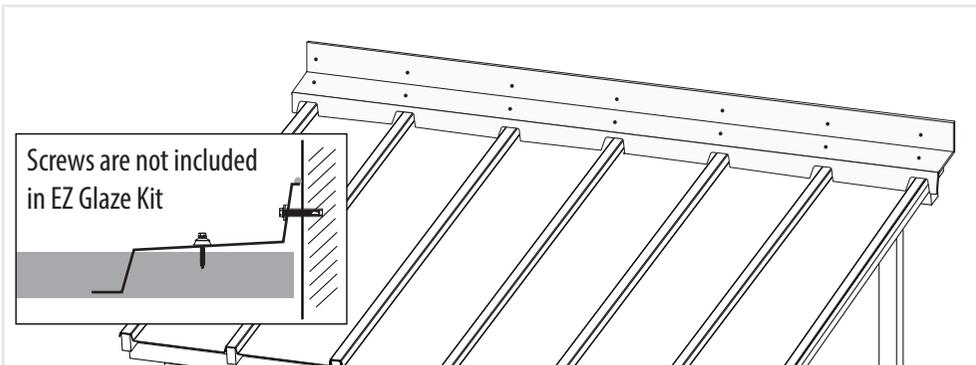

**PALRAM H.Q.**  
Tel: +972 4 8459900  
Fax: +972 4 8444012  
palram@palram.com  
www.palram.com

**PALRAM EUROPE LTD.**  
Tel: +44 1302 380777  
Fax: +44 1302 380788  
sales.europe@palram.com

**PALRAM AMERICAS**  
Tel: 610 2859918  
Fax: 610 2859928  
palramamericas@palram.com  
www.palramamericas.com

